

# Barbie™

---

**B-View™ Digital Photo Frame  
with Remote Control**

**OWNER'S MANUAL**

**BAR598**

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

# SAFETY PRECAUTIONS



## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



### **DANGEROUS VOLTAGE:**

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



### **ATTENTION:**

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### **CAUTION-ELECTRICALLY OPERATED PRODUCT:**

Not recommended for children under 5 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS AC ADAPTER WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this product.
3. Keep this product out of strong sunlight; direct sunlight may damage this product.
4. Unplug the AC adapter from the outlet and from this product if you are not using this product for a long period of time.
5. Unplug the AC adapter from the outlet and from this product before cleaning. Use a dry, soft cloth for cleaning. If necessary, mild soap and water may be used. Do not use liquid cleaners or aerosol cleaners.
6. Only touch the screen gently. The screen of this digital photo frame is made of glass and can be easily scratched or broken.
7. Do not use this product near water—for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
8. Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury and serious damage to the product.

# SAFETY PRECAUTIONS

9. Slots and openings in the cabinet and in the back or bottom are provided for ventilation and to ensure reliable operation of this product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing this product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in an enclosed environment unless proper ventilation is provided.
10. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
11. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it. Do not attach power cord to building surfaces.
12. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
13. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on this product.
14. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service person when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
15. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged or frayed.
  - b. If this product has been exposed to rain or water.
  - c. If this product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - d. If this product has been dropped or the cabinet has been damaged.
  - e. If the product exhibits a distinct change in performance.
16. Use only the AC adapter and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
17. **CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

# SAFETY PRECAUTIONS

**FCC INFORMATION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC WARNING:**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

# WELCOME

Emerson Radio Corp. has produced this product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



## WARNING

Choking Hazard—Small Parts and Packaging Materials. Not for children under 5 years.


- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

### NOTES:

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.

# LOCATION OF CONTROLS

## MAIN UNIT

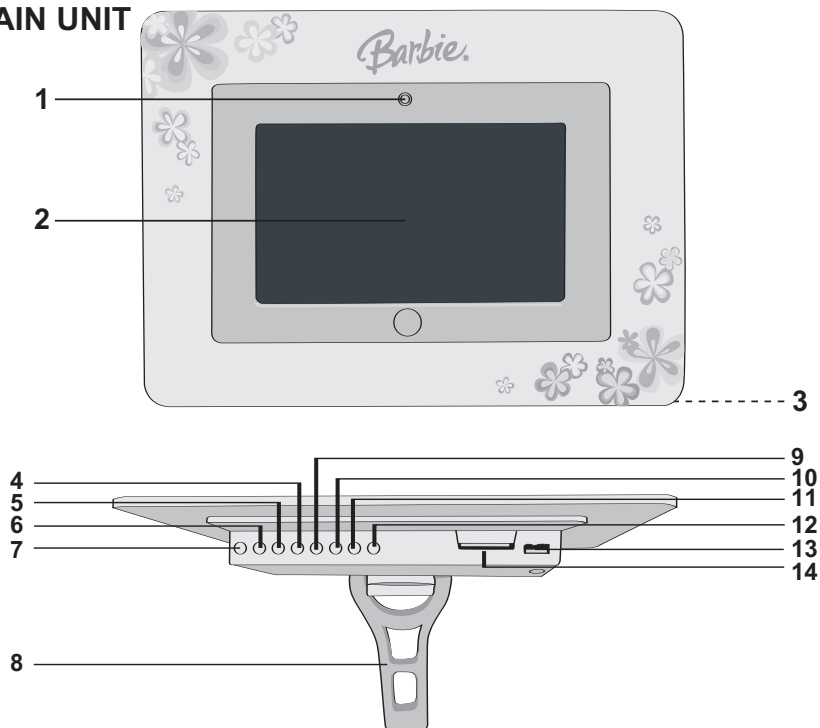

1. **Remote Control Sensor**
2. **Display**
3. **DC 12V IN Jack** (Bottom of Unit)
4. **Prev Button:** Press to play the previous picture or to move down.
5. **Next Button:** Press to play the next picture or to move up.
6. **Play/Pause Button:** Press to start or pause playback.
7. **Power On/Off Button:** Press to turn this unit on or off.
8. **Stand**
9. **Menu Button:** Press to enter display mode menu.
10. **Rotate Button:** Press to rotate the picture.


11. **Speed Button:** Press to choose Slow, Normal or Fast picture playback speed.
12. **USB/Card Button:** Press to choose USB or Card.
13. **USB Port**
14. **SD/MMC Card Slot:** Insert the card along the arrow's direction.\*

### \* IMPORTANT NOTE:

Make sure to insert the SD/MMC card correctly as indicated by the arrow.

## LOCATION OF CONTROLS (CONTINUED)

### REMOTE

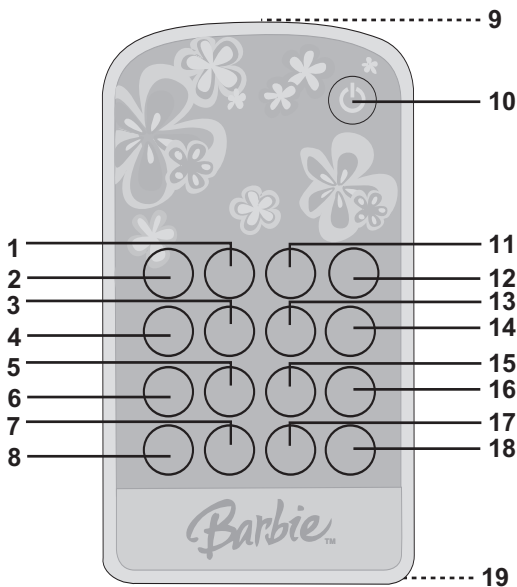

- 1. Enter Button:** Press to confirm a selection.
- 2. Up Button:** Press to move up.
- 3. Normal Button:** Press to select Normal picture playback speed.
- 4. Fast Button:** Press to select Fast picture playback speed.
- 5. Bright + Button:** Press to increase the brightness.
- 6. Bright - Button:** Press to decrease the brightness.
- 7. 4:3/16:9 Button:** Press to choose between 4:3 (standard)/16:9 (wide) mode.
- 8. Rotate Button:** Press to rotate the picture.
- 9. Remote Transmitter (Top of Unit)**
- 10. Power On/Off Button:** Press to turn this unit on or off.
- 11. Down Button:** Press to move down.
- 12. Menu Button:** Press to enter display mode menu.
- 13. Slow Button:** Press to select Slow picture playback speed.
- 14. Play/Pause Button:** Press to start or pause playback.
- 15. Prev Button:** Press to play the previous picture.
- 16. Next Button:** Press to play the next picture.
- 17. USB Button:** Press to choose USB.
- 18. Card Button:** Press to choose Card.
- 19. 3V (CR2025) Lithium Battery Compartment (Rear of Unit)**



















